




PRODUCT NAME: SWING


ITEM NUMBER: 30257WTPD

Please consult your electrician for hanging fixture and wiring.


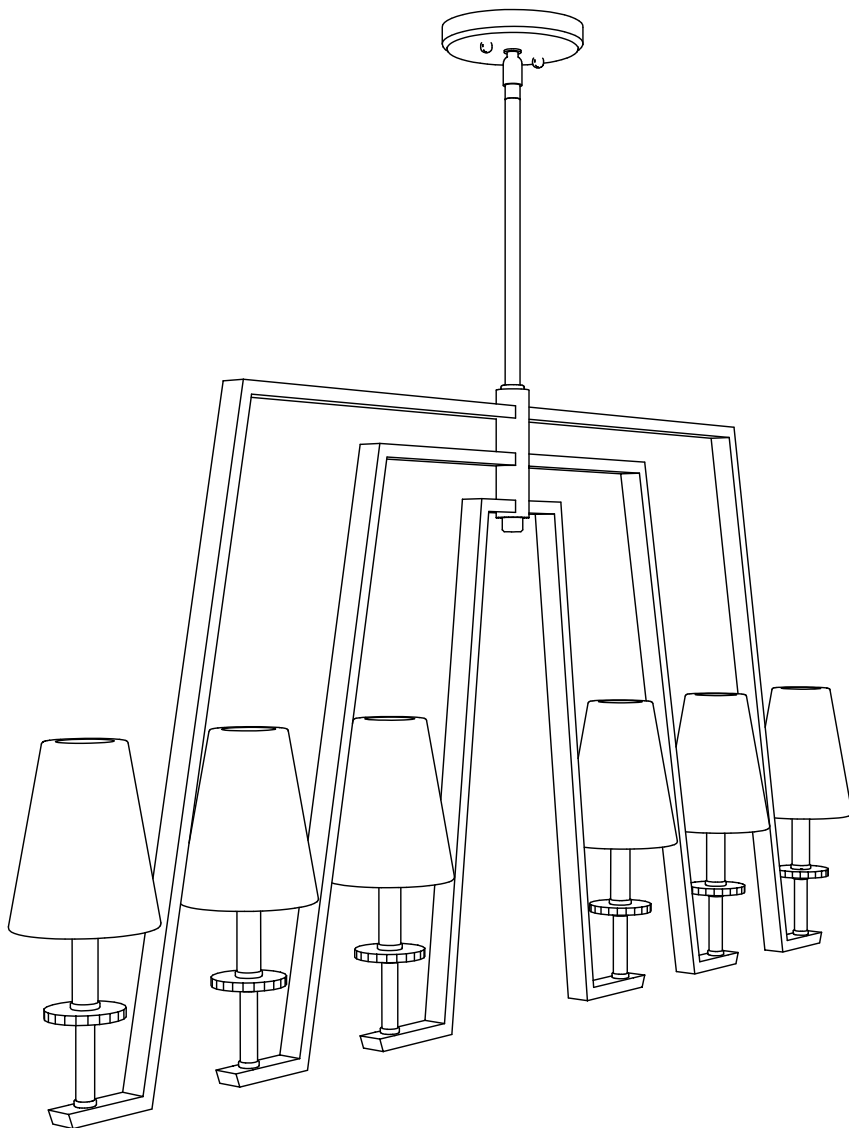


E12 6X60W


IMPORTANT: Turn off the power at the main fuse or circuit breaker box before starting installation.

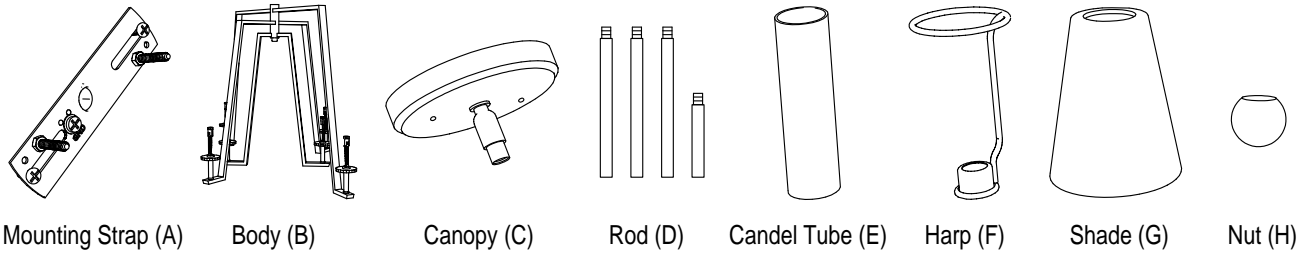


Locate all hardware & components before discarding packaging

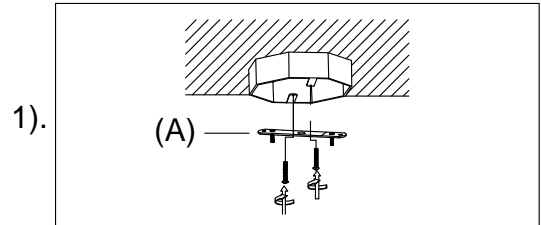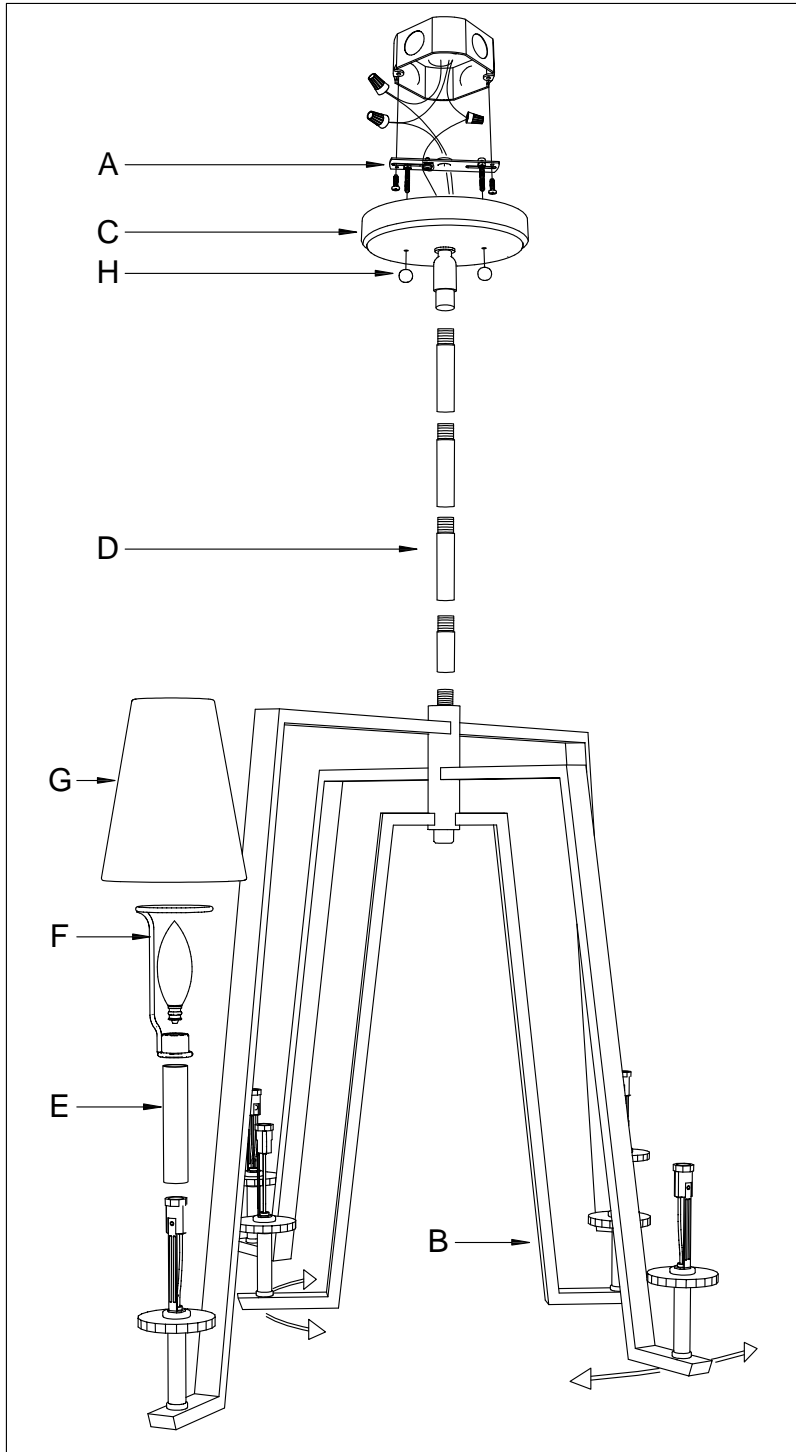


1).
Step.1: Remove mounting bracket (A) from fixture and install to electrical box.

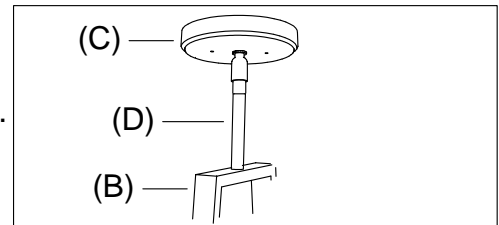

2).
Step.2: Determine correct length of rod needed for hanging height. Screw the Rod (D) on the Body (B) and Canopy (C).

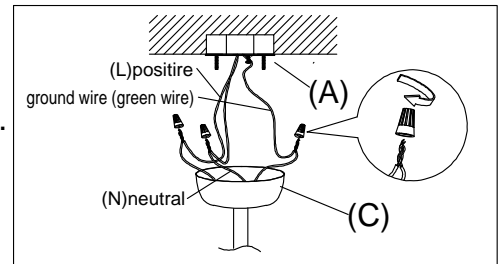

3).
Step.3: Wire fixture to wires in outlet box. Green wire is for Ground.

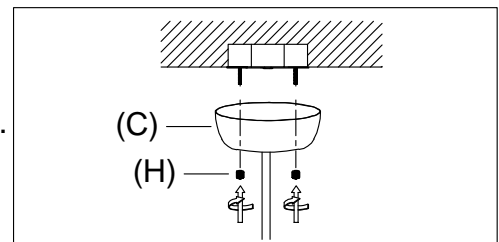

4).
Step.4: Install body (B) to bracket (A) and tighten nut (H) on the canopy (C) to secure. Rotate the arm of body(B) to appropriate angle. Place the Candle Tube (E) over the socket and place Harp (F) on the tube. Install light bulb. Place glass Shade (G) on the harp.

Cleaning & Care:
Clean with soft cloth and a mild detergent.
Do not use abrasive cleaner.