

STARSTRAND DIRECT WIRE DRIVER INSTRUCTIONS



$$L$$
 = Line N = Neutral $\frac{\bot}{-}$ = Ground

- Polarity must be maintained. Each driver output cord and tape has + positive pin. Connectors are marked with + symbol. Positive polarity must be maintained or a section will not light. It is recommended to install all sections and power up to make sure polarity is correct before adhering to surface.
- Direct wire drivers should be installed into a U.L. listed wire connection box.

