 



INSTRUCTION FOR DC MOTOR CEILING FAN

WALL CONTROL

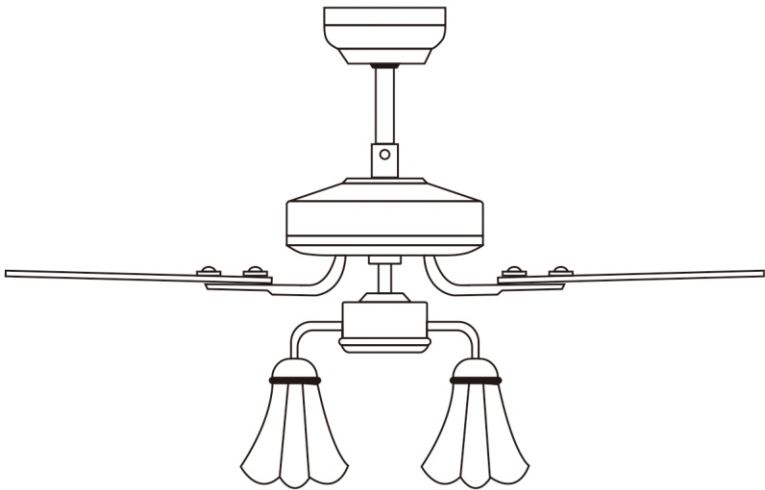

INNOVATION•ENERGY- SAVING•FUTURE

 WIRING SCHEMATIC DIAGRAM FOR RECEIVER

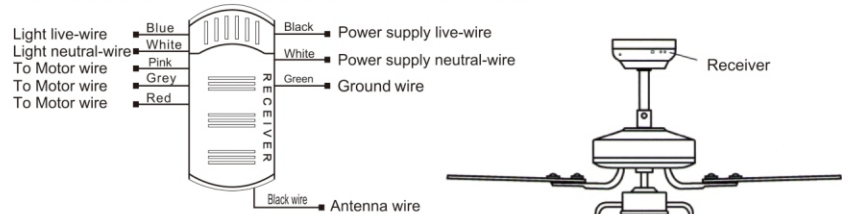

POWER PARAMETER LIST


Voltage	Fan(max.)	Lamp(max.)
120V	60W	40W

Adopt RF wireless digit emission technique, biunique controlled , coincident code rate is less than one millionth.(Wall Control and receiver must be sent back to factory for maintenance if damaged.)

Receiver can be controlled by any angles of the wall control in prescriptive space, unrestricted by direction.

With the memory function, the wall control can save the status(direction) while the supply power OFF and resume to the original after reload the power supply.

 FUNCTION INSTRUCTION OF EMITTER

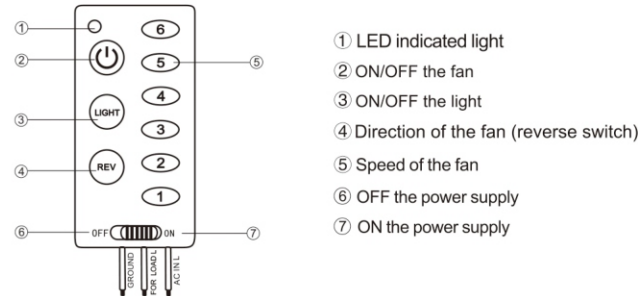

KINDLY REMINDERS:

- The wall control and receiver included with your fan have been paired beforehand , this learning code matching mode is only for when you need to do a new pairing of the wall control and receiver.
- Learning code matching mode is used between wall control and receiver. Turn "ON" the supply power within 30 seconds and press the wall control 's " " button for 5 seconds, it can load normally after hearing a long sound "bee", which means learning successfully and it can works normally. (PS: Learning mode is not accepted after turn "ON" the supply power for 30 seconds).
- When the wall control cannot control the receiver, please check is there any existence of similar remote controlled products nearby, then check whether they works, because remote controlled product with the same frequency will disturb each other.
- The maximum load of lighting see the above"POWER PARAMETER LIST"
PS: please connect the ground wire correctly, otherwise it may cause the light micro-light or flash
- When installing the fan,the fan ceiling cover don't press the antenna(or other wire),it is easy to breakdown the wire and short-circuited.

E-FT12W09 V1. 0