


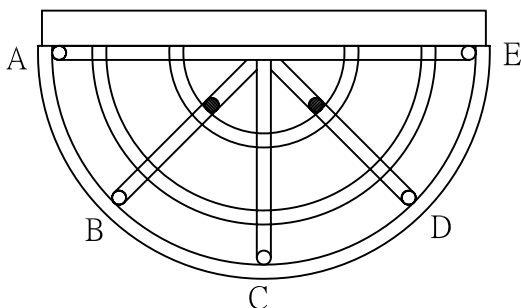
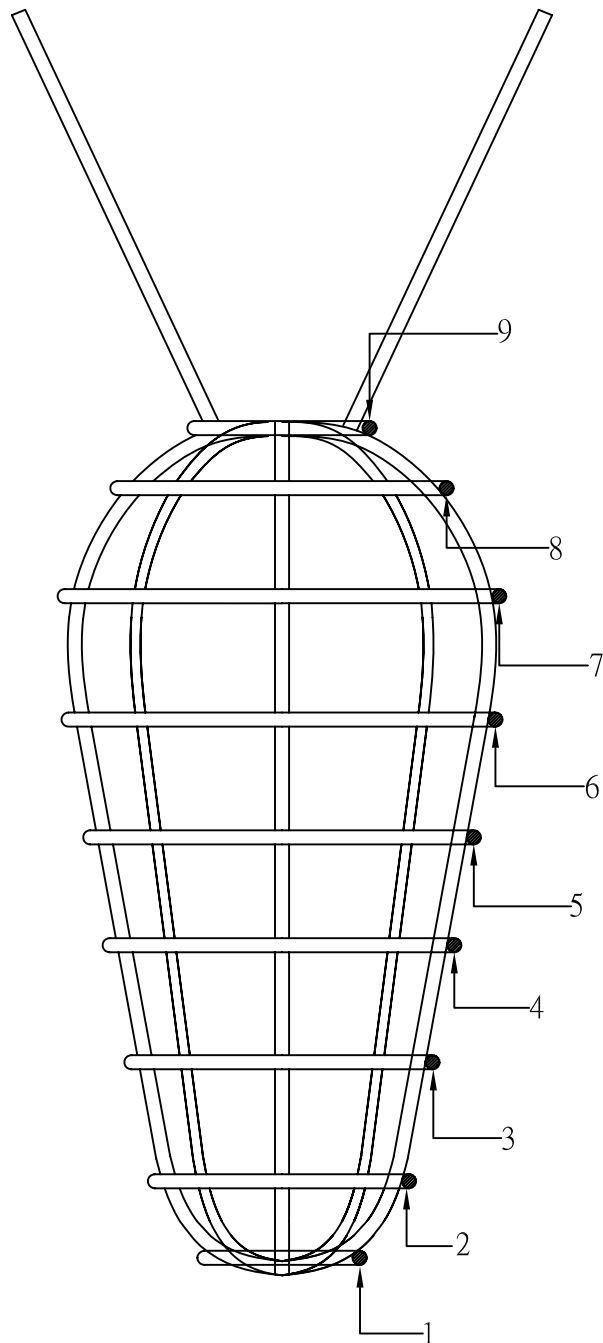
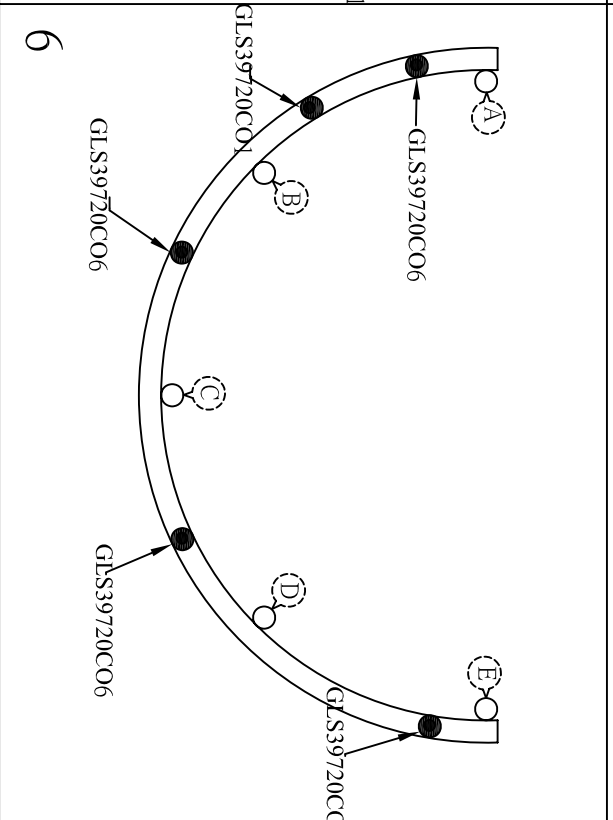
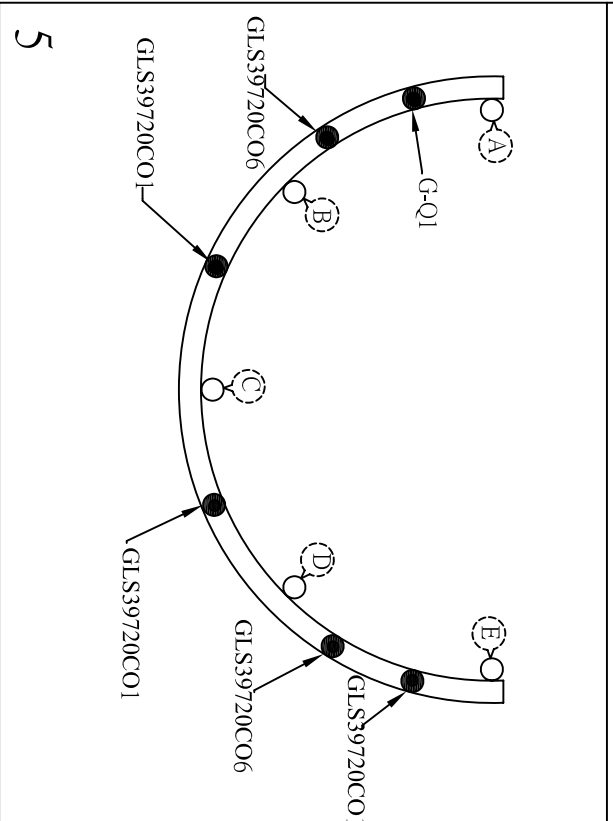
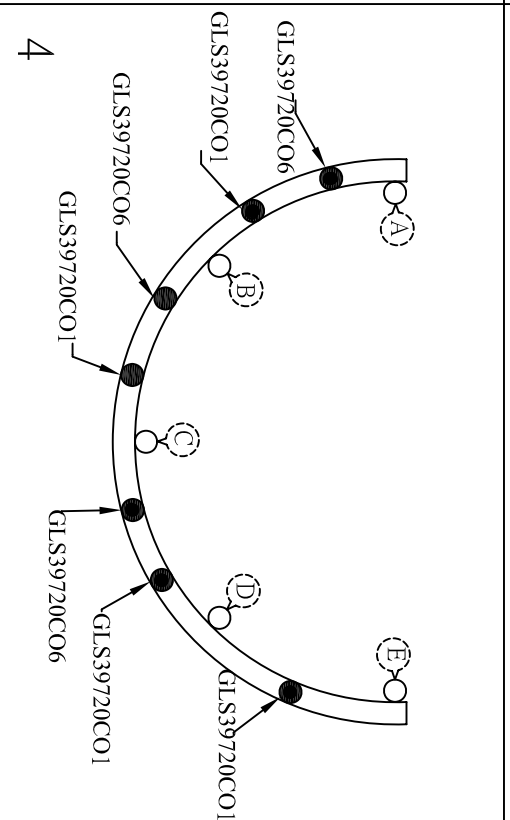


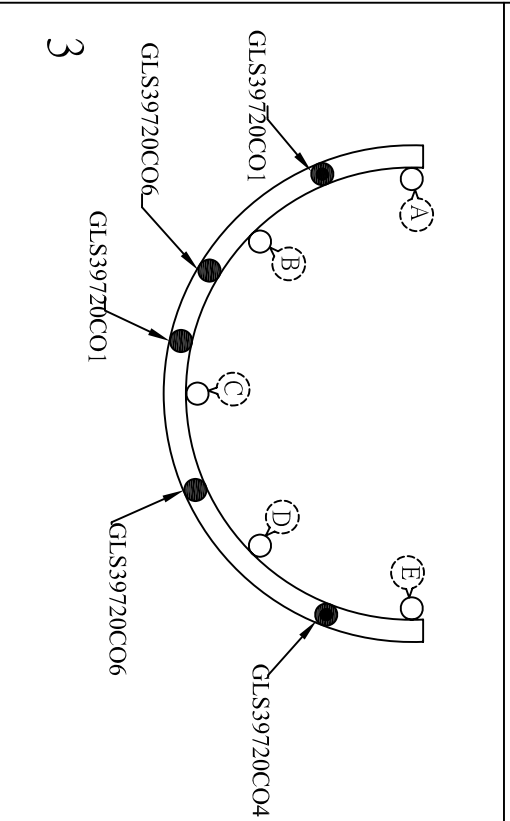


## Assembly Instruction For 39738COPC

1. Lay out glass by row beginning with bottom row 1. Glass is attached to cage by simply inserting hook onto horizontal bar and pull towards you until it locks.
2. Begin on bottom row 1, Space A and work counter clockwise until each row is complete. Please note that enclosed diagram is a suggested layout. It is not critical to install exact. Glass size will vary so sometimes installing a piece on the next row down allows glass to stand more upright.
3. Last are placed on vertical supports. It is not necessary to hook these to frame
4. Extra glass is supplied so if there is left over do not be concerned. If you can install extra on frame do so.

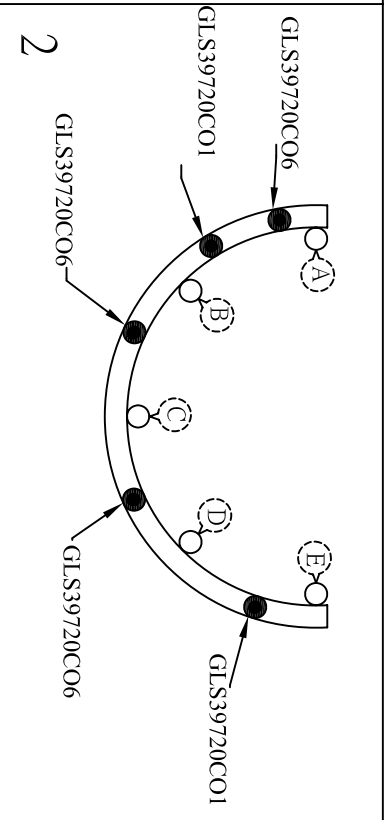


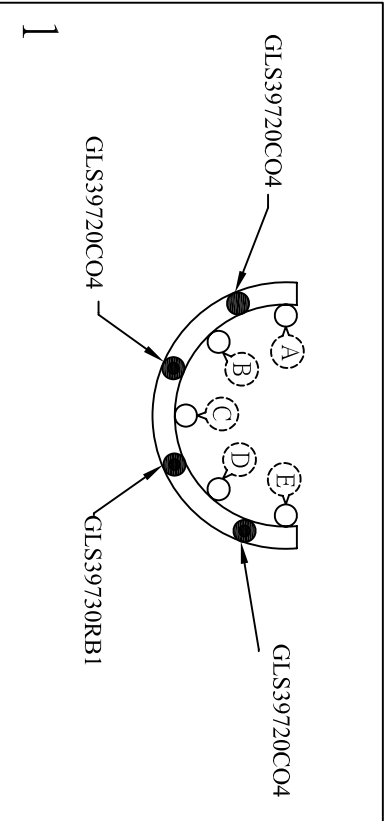

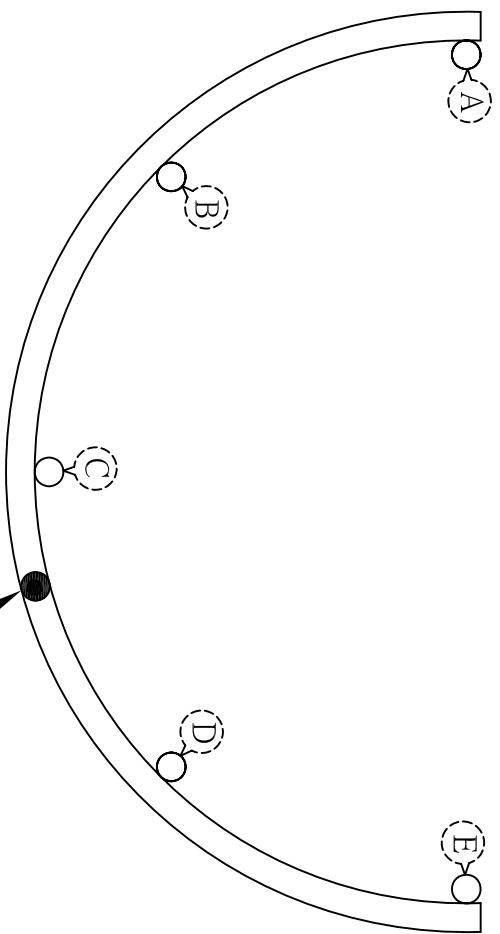

GLS39720CO1

7

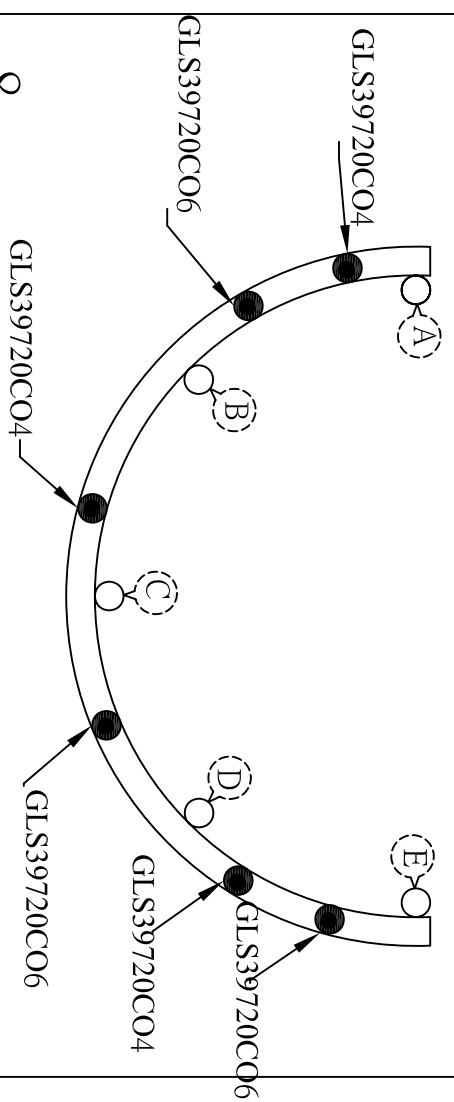

GLS39720CO4


GLS39720CO6

GLS39720CO4

GLS39720CO4

GLS39720CO6

8

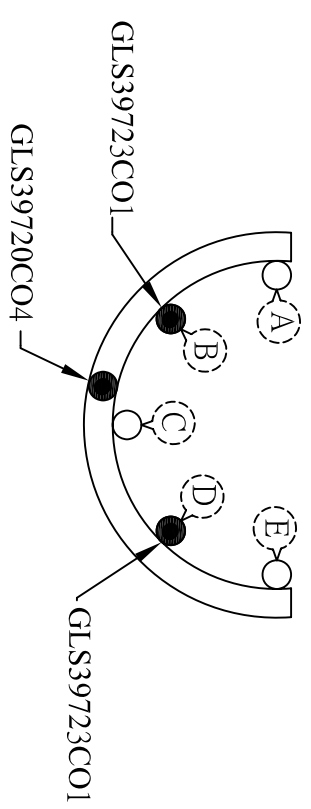


GLS39723CO1

GLS39720CO4

GLS39723CO1


9

# CO=Cognac Finish

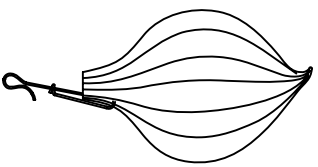


GLS39720CO1

Glass size: 3"W\*4.5"L

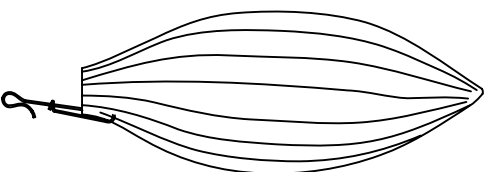


GLS39730CO1

Glass size: 3.25"W\*8.25"L

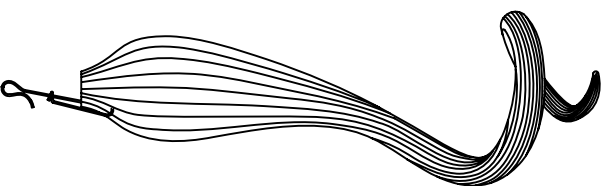


GLS39720CO4

Glass size: 2.25"W\*10.5"L

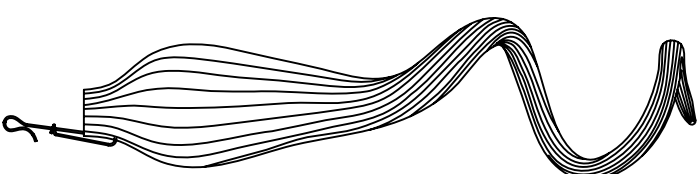

GLS39723CO1

Glass size: 2.25"W\*12.5"L

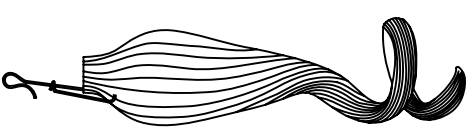

GLS39720CO6

Glass size: 2"W\*7.75"L